 


# Technika

LED TV with Freeview & USB Media Player

## User Guide

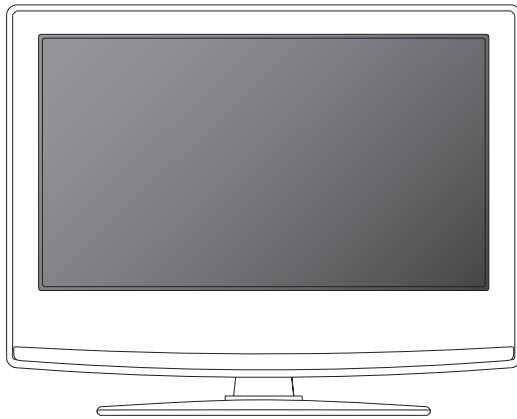

### Model No

22E21B-FHD	24E21B-FHD
22E21B-FHD/DVD	24E21B-HDR
22E21W-FHD/DVD	24E21B-FHD/DVD
22E21P-FHD/DVD	24E21B-HDR/DVD
22E21S-FHD/DVD	24E21W-FHD/DVD
	24E21W-HDR/DVD

# IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

## Warnings

- To reduce the risk of fire, electric shock or damage to the television, do not expose it to dust, rain or moisture, or place any objects filled with liquids on or near the television.
- Do not place the television in a confined space. Ensure that nothing can obstruct the ventilation openings at the rear of the television.

To prevent spread of fire, keep candles or other open flames away from this product at all times



- Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

## Safety

- For your safety, this appliance is fitted with a fused moulded 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark.
- Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement Mains cable is required, contact the manufacturer for a suitable replacement.
- Never use the television if it is damaged in any way.
- Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration.
- Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.
- Never place mobile phones, speakers or any other device which may cause magnetic or radio interference, near the television. If interference is apparent, move the device causing the interference away from the television.
- To disconnect the apparatus from the mains, please use the mains plug located on the underside/rear of the TV. The mains plug shall remain readily operable.

- When installing on a wall, ensure the TV is at least 5cm from the wall for ventilation.
- Ensure that the power switch on the unit and the mains plug are always easily accessible.

**WARNING:** Excessive noise when using earphones and headphones can cause loss of hearing.

## Maintenance

- To clean this unit, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.
- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using a chemically treated cloth, read the instructions that came with the cloth carefully.

**CAUTION:** If water or other liquid enters the television through the display panel surface, a malfunction may occur.



## Packaging

- The safest way to transport your item is in the original box/packaging - please save your packaging for this.
- You will need original box/packaging in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package the item correctly.

# IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

## Important Information Regarding Use of Video Games, Computers, Captions or Other Fixed Image Displays

The extended use of fixed image program material can cause a permanent "shadow image" on the LCD/LED panel.

This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible LCD/LED panel deterioration can be limited by observing the following steps:

1. Reduce the brightness/contrast setting to a minimum viewing level.
2. Do not display the fixed image for extended periods of time.
3. Turn the power off when not in actual use.

Examples of images that you need to watch out for are as follows (this is not an exhaustive list):

- TV Channel Logos: e.g. Shopping channel logos and pricing displays-especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- Time Displays
- Teletext: Do not view a stationary page for a long period of time
- TV/DVD Menus: e.g. Listings of DVD disc content
- Pause Mode: Do not leave the TV in pause mode for long periods of time, e.g. When watching DVDs or videos.

**Important** - Once 'shadow image/screen burn' occurs, it will never disappear and is not repairable under warranty.

## How do I dispose of this product?

**UK:** Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. For your nearest facilities, please see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in store for details.

**ROI:** Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. Check with your Local Authority or retailer for recycling advice.

### Batteries

- Do not expose batteries to high temperatures, excessive heat, prolonged sunshine or fire as this may cause leakage, explosion or ignition.
  - Observe the correct polarity when inserting batteries.
  - Do not use different types of batteries together or mix old and new batteries.
  - Dispose of batteries in an environmentally friendly way.
  - Certain regions may regulate the disposal of batteries.
- Please consult your local authority.



Cd

## TV Models with built in DVD players

### CAUTION:

CLASS 1  
LASER PRODUCT

This caution label is located on the rear panel of the unit

THIS UNIT IS A CLASS 1 LASER PRODUCT. THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.

WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

---

# CONTENTS

---

Manufacturers Guarantee Information . . . . .	3
Important Safety Instructions . . . . .	4-5
What is included in the box . . . . .	8
Attaching/Detaching the Stand . . . . .	9
Securing the TV to a Wall/ Wall mounting . . . . .	10
Remote Control . . . . .	11
TV Buttons and Input Source Menu . . . . .	12
Connections . . . . .	13-15
TV Menu Operation . . . . .	17-24
Channel Menu . . . . .	17
Picture Menu . . . . .	18-19
Sound Menu . . . . .	20-21
Time Menu . . . . .	22
System/Hotel Lock Menu . . . . .	23
Setup Menu . . . . .	24
DVD Setup Menu . . . . .	25
7 Day TV Guide . . . . .	26
USB Record - Freeview / Saorview . . . . .	27
USB Mode / Media Player . . . . .	28
General Information . . . . .	29-34
Using your TV with a Sky digital set top box . . . . .	29
Frequently Asked Questions . . . . .	30
Technical Specifications . . . . .	31-34



 
For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

# WHAT IS INCLUDED IN THE BOX

## Accessories

Included with this TV are the following accessories

1 x User Guide

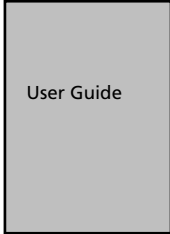

1 x Remote Control



 
1 x Quick Start Guide



2 x AAA Batteries



1 x TV

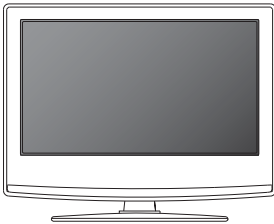

1 x Mini Component / YPbPr



 
1 x Mini Composite / Video



1 x RF Cable



1 x Stand plus screws






Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

# ATTACHING/DETACHING THE STAND

   
## Attaching the stand

To complete the stand installation you will require a cross head screw driver


There are two types of screws provided as shown below.

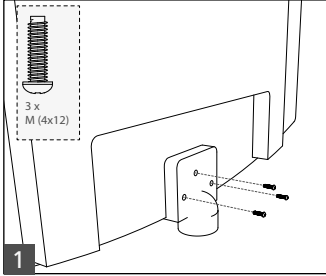

(fig.1) Attach the stand neck to the rear of the TV set using the 3 x M(4x12) screws provided.

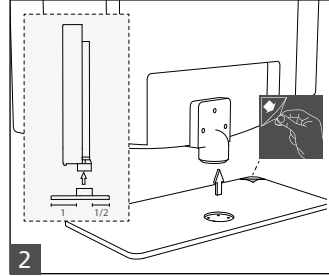 

(fig.2) Peel off the protective plastic cover then attach the stand base to the stand neck.

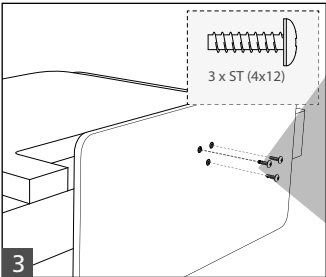 


When securing the self-tapping screw/s into the base of the stand (on first installation) the screw/s will be naturally tight as they create a thread in the plastic of the stand neck in order to support a TV of this size.

- a) Ensure the cross head screw driver tip fits correctly into the head of the screw and that it is not too big or small.
- b) Screw in all screws individually and partially before tightening all of the screws fully.
- c) If they become very tight try loosening them slightly and then re-tightening them once again as this will continue the process of creating the thread for the screws.

(fig.3) Secure the base to the neck by using the 3 x ST(4x12) screws provided.

## Detaching the stand

 Remove the screws highlighted then remove the stand base and neck from the rear of the TV set.

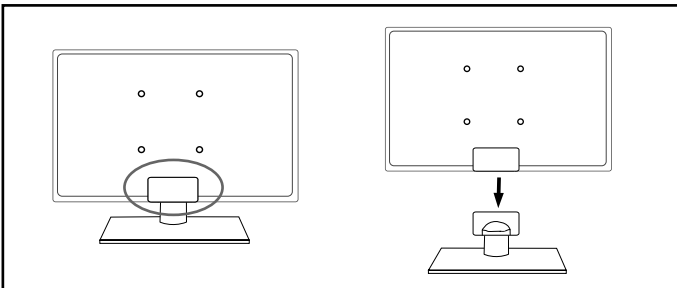

# SECURING THE TV TO A WALL

 
 
## Securing the TV to a Wall

For maximum security in the home when using a TV with its stand anti-tip straps should be fitted. These are available from supermarket websites and other websites and are an easy, inexpensive and effective way of ensuring your TV stays safely upright. Straps are designed to be attached to the rear of the TV and then tethered to the wall or the furniture the TV is stood on.

**Note - Please ensure that children do not climb on the TV set.**

**A)** Using one or both of the top wall-mounting holes and screws (the screws are already supplied in the wall mounting holes) fasten one end of the fastening cord/s to the TV.


**B)** Secure the other end of the fastening cord/s to your wall. (you will need screws/fixings suitable for your wall type - available separately from most DIY stores).

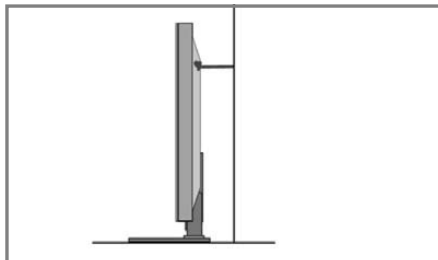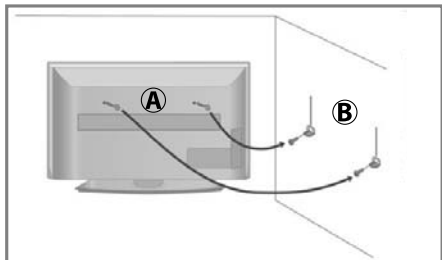

The Royal Society for the Prevention of Accidents is urging people to take care with flat-screen televisions. RoSPA stated in 2010 that "Toddlers are particularly at risk of pulling flat-screen televisions on to themselves. They are unsteady on their feet and are attracted by colourful television images." The risk is increased as televisions become lighter.

## Wall Mounting

 **IMPORTANT - Before drilling any holes in the wall ensure you are not drilling where there could be any electrical wires, water or gas pipes.**

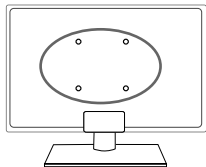

- 1) Remove the four screws highlighted that are supplied in the wall mounting holes.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV.

For VESA wall mounting information please refer to the Technical Specification page.

For optimum viewing, if wall mounting the TV higher than eye level, the TV should be tilted downwards so that the TV's screen is 'face on'. See fig 1 and 2.

ig 1 INCORRECT

 
 








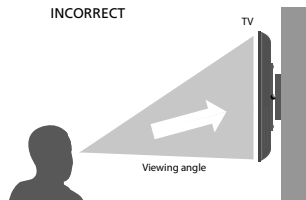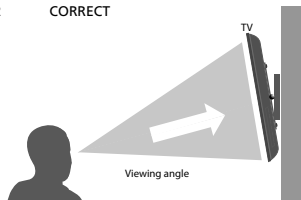


 



 









fig 2 CORRECT



**Important – If wall mounting this TV, only use the screws already provided in the wall mounting holes. Using other screws which are longer could cause irreparable damage to internal parts.**

# REMOTE CONTROL

- 1 **STANDBY** - Switch on TV when in standby or vice versa  
**MUTE** - Mute the sound or vice versa  
**DTV** - Switch to Freeview source  
**RADIO** - Switch to radio whilst in Freeview source  
**USB** - Switch to USB source  
 **DVD** - Switch to DVD source
  
  - 2 **NUMBER BUTTONS** - 0 – 9 to select a TV channel directly.  
**TV GUIDE** - Opens the 7 Day TV Guide (Freeview mode)  
 - To return to the previous channel viewed
  
  - 3 **VOL (+/-)** - To increase / decrease the sound level  
**P.MODE** - Scrolls through picture mode options  
**S.MODE** - Scrolls through sound mode options  
**FAV** - To display favourites menu  
**CH (+/-)** - To increase or decrease the channel being watched  
**MENU** - To display OSD menu  
**EXIT** - To exit all menus  
**(▲/▼/◀/▶/OK)** - Allows you to navigate the on-screen menus and adjust the system settings to your preference  
**SOURCE** - To display the input/source menu  
**INFO** - Press once for now/next channel information  
 Press twice for programme information about current programme
  
  - 4 **ASPECT** - To switch the screen between the different picture formats  
**SLEEP** - Press repeatedly to cycle through the sleep options  
**AUDIO** - To change the audio language (if available)  
**SUBTITLE** - To switch the dialogue at the bottom of the screen (on/off)  
**TEXT** - To enter/exit Teletext (Analogue TV)  
**TEXT HOLD** - Teletext mode - Hold current page which is displayed (Analogue TV)  
**DISPLAY** - To switch off the screen when listening to radio  
 **TEXT/DVD ZOOM** - Zoom function for Teletext and DVD  
  **DVD MENU/RECORD** - Access the DVD root menu and USB record function
    -  - To restart the current chapter
    -  - To advance forward to the next chapter
    -  - To stop the playback/Eject Disc  
 (To EJECT the disc press/hold the  button for 4 seconds)
    -  - To play in fast rewind mode
    -  - To play in fast forward mode
    -  - To play/pause
  -  **DVD SETUP/REC LIST** - Opens up DVD Menu or Opens the list of what has been previously recorded
  -   **GOTO** - To go to a specific chapter
  -   **A-B** - Press once to set point, press a second time to return to point
  -  **ANGLE** - Select different angle of DVD
  -   **REPEAT** - To repeat playback
- 
-  For Models with Integrated DVD players
  -  For Models with PVR Function
  -  For Models with USB Playback





 
# TV BUTTONS AND INPUT SOURCE MENU

This information is for models  
without built in DVD players



- 1 Volume up and menu right
- 2 Volume down and menu left
- 3 Programme/Channel up and menu up
- 4 Programme/Channel down and menu down
- 5 Displays Menu/OSD
- 6 Displays the input source menu
- 7 Standby Power On/Off

This information is for models  
with built in DVD players

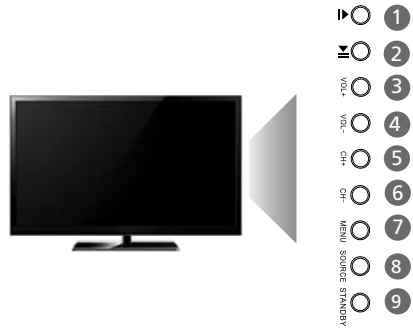

- 1 Stop/Eject Disc
- 2 Play/Pause Disc
- 3 Volume up and menu right
- 4 Volume down and menu left
- 5 Programme/Channel up and menu up
- 6 Programme/Channel down and menu down
- 7 Displays Menu/OSD
- 8 Displays the input source menu
- 9 Standby Power On/Off

## Choosing Mode Input/Source

To switch between the different input/  
connections.

For further information on input/connections  
please view 'Connections' pages.

A) Using the buttons on the remote control:

- 1) Press [SOURCE] - The source menu will appear.
- 2) Press [V] or [A] to select the input you require.
- 3) Press [OK].

 
 
 
B) Using the buttons on the Television:

- 1) Press [SOURCE].
- 2) Scroll up / down using CH+ / CH- buttons to the input/source you require.
- 3) Press Vol+ to change input/source to the one selected.



Example of Source menu  
depending on the TV model

# CONNECTIONS

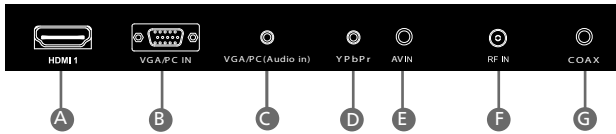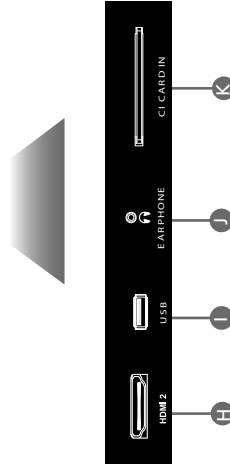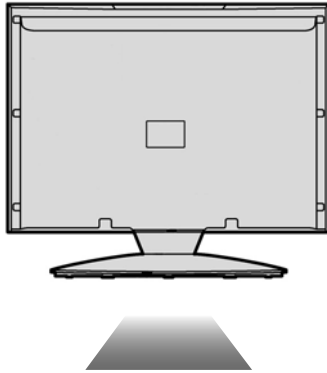

<b>A</b>	HDMI 1	HDMI input
<b>B</b>	VGA PC	VGA-PC input
<b>C</b>	VGA PC Audio In	3.5mm PC audio input
<b>D</b>	YPbPr/Component	HD input (Ypbpr)
<b>E</b>	AV IN	Input for Composite/Video and Audio for Composite / Video and Component / Y Pb Pr


<b>F</b>	RF IN	RF / TV Aerial Input
<b>G</b>	COAX Audio Out	Digital Coax output
<b>H</b>	HDMI 2	HDMI input
<b>I</b>	USB	USB port
<b>J</b>	Earphones	Earphone Input
<b>K</b>	CI CARD IN	Common Interface module

# CONNECTIONS

 Note: Connecting cables are shown for example only and may not be included. Please check 'What Is Included In The Box' page.


## Connecting to a device with Composite AV/Video output

TV Source should be set to Composite/AV

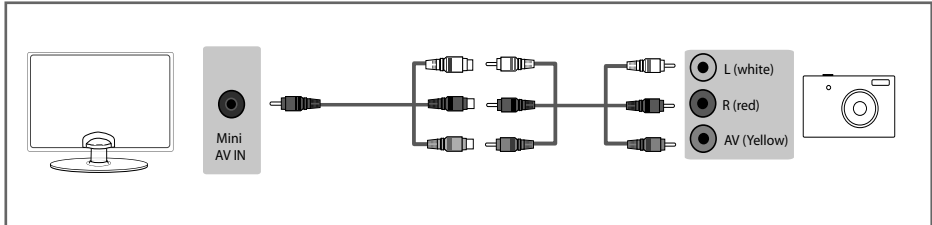

## Connecting to a device with SCART output (using SCART to AV cable)

 
TV Source should be set to Composite/AV

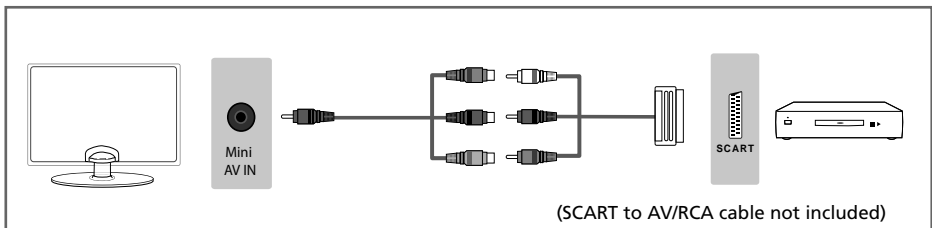

## Connecting to a device with HDMI output

A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.

 TV Source should be set to the corresponding HDMI port (HDMI 1, HDMI 2 etc)

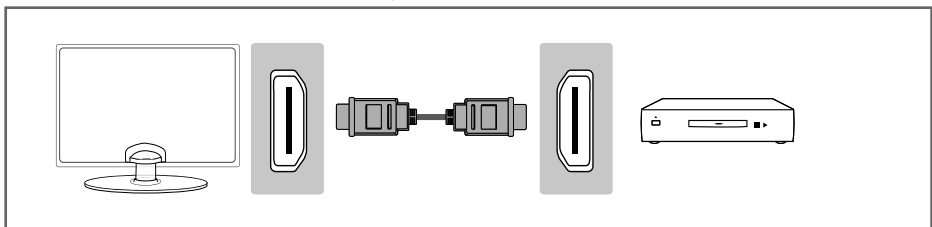


Note: To use this model TV as a PC/laptop monitor it will need to be connected via the VGA input, it can not be used as a PC/laptop monitor via the HDMI input. The HDMI Input is provided to view digital content with compatible external devices

# CONNECTIONS
 
## Connecting to a device with Component/YPbPr output


If you are supplied with a cable from the device which has RED, GREEN, BLUE, RED & WHITE connectors you must connect via Component (for picture) and by phono cable (for sound).

TV Source should be set to Component/YPbPr

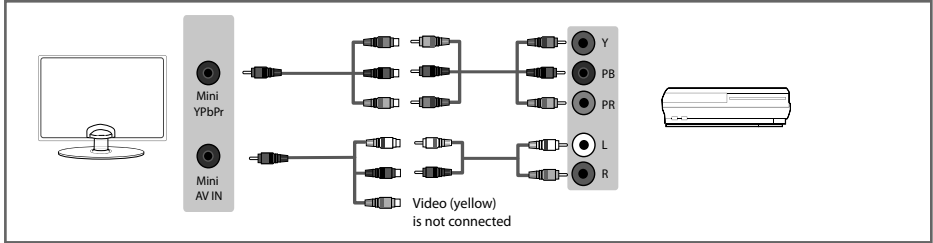

## Connecting to a device with VGA/PC output (Laptop or Desktop Computer)

 TV Source should be set to VGA/PC

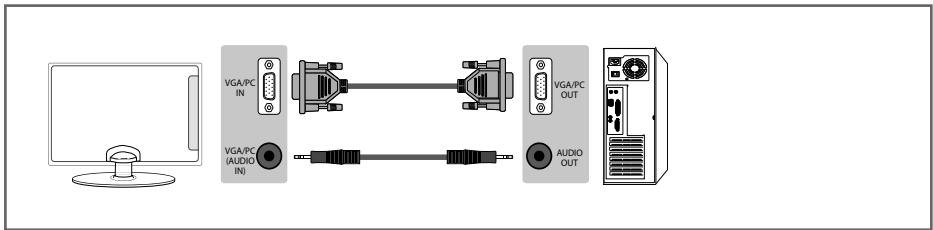


## Connecting to an external audio device (Amplifiers, Surround Sound, Sound Bars etc\*)

When connecting via the TV's 3.5mm Earphone output, this will disable the TV speakers.

There are two options to connect a device via the 3.5mm Earphone Output.

 \*Connecting cables not included .

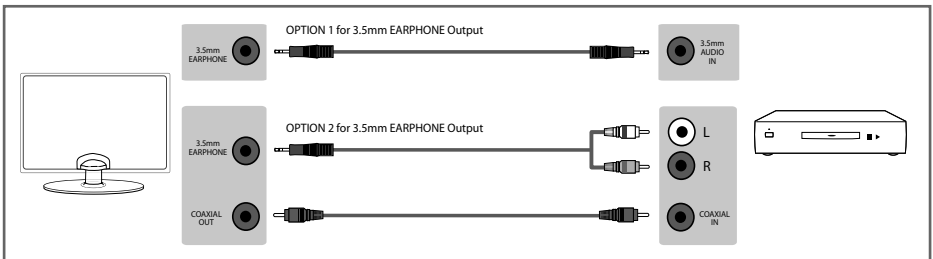

# CHANNEL MENU



To access this menu, press [MENU] button on the remote control.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Auto Tuning - Allows you to retune the television for all digital channels, digital radio stations and analogue channels

Analogue Manual Tuning - Allows you to manually tune your analogue signal

Freeview Manual Tuning - Allows you to manually tune your digital signal

Channel Edit - Allows you to delete, move, skip and add favourite channels



Schedule List - Lists your programme reminders

Signal Information - Allows you to view signal frequency, signal quality and signal strength

CI Information - Pay per view services require a "smartcard" to be inserted into the TV. If you subscribe to a pay per view service the provider will issue you with a 'CAM' and a "smartcard". The CAM can then be inserted into the COMMON INTERFACE PORT (CI Card In)

Tip: If you do not press any buttons for 30 seconds, the menu will automatically exit. You can change the length of time before the menu exits automatically - see 'OSD Timer' in the Time Menu

# PICTURE MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

**Picture Mode** - Choose from the following presets:

Dynamic	Recommended settings for fast moving pictures
Standard	Standard settings
Mild	Set to be lighter in colour and less bright
Personal	Lets you manually alter all the settings
Economy	Power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). In Economy mode, the TV will switch itself to Standby mode after 3-5 hours in the event that the TV buttons or remote control buttons are not pressed (change the picture mode to another setting to de-activate this function)

You can make the following adjustments in **Personal** mode:

**Contrast** - Switch the balance between black and white.

**Brightness** - Increase or decrease the brightness of the picture.

**Colour** - Increases the colour from black and white.

**Tint** - Lets you increase or decrease the level of tint within the picture (only available in VGA/PC source mode).

**Sharpness** - Increase or decrease the sharpness of the picture.

 
**Colour Temperature** Choose from the following presets:

Normal	Default settings
Warm	Increases red within the picture
Cold	Increases blue within the picture

**Noise Reduction** - Choose from the following presets:

Off	Turns noise reduction off
Low	Minor system adjustment
Middle	Medium system adjustments
High	Maximum system adjustments

# PICTURE MENU

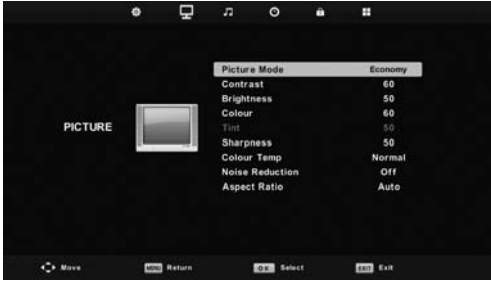

To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]


If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Aspect Ratio - Within the UK the picture format varies depending on the channel/broadcast. There are a number of different options to best meet your needs

## Auto

 Automatically displays the best picture format. So the picture is in the correct position. May have black lines at the top/bottom and/or sides.

16:9

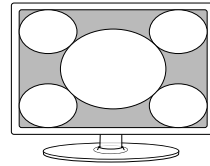


Fills the screen with a regular 16:9 signal and 4:3 picture format will be stretched to fill the screen

## Original

 
Will display the picture from the broadcaster without any change

14:9

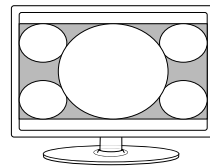


Displays the 14:9 picture in the correct proportion. As a result side bars are shown on the screen

 4:3

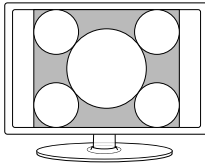

Displays the 4:3 picture in its original size. Side bars are shown to fill the 16:9 screen

 Zoom

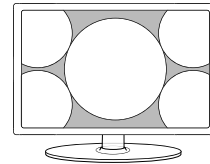

The picture is the correct proportion but zoomed in to fill the screen

# SOUND MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Sound Mode - Choose from the following presets

Standard	Default settings
Music	Emphasises music over voices
Movie	Provides live and full sound for movies
Sports	Emphasises sound for sports
Personal	Selects your personal sound settings

**Tip:** Treble and bass levels can only be adjusted when the sound mode 'Personal' is selected.

Treble - To adjust the amount of high frequency within the sound

Bass - To adjust the amount of low frequency within the sound

Balance - To switch the sound between the left and right speakers

Auto Volume Level (AVL) - When 'on' is selected, the volume will attempt to stay at a constant level regardless of TV programme and advertisements

Surround Sound - Choose from the following options:

Off	Off
TruSurround HD	TruSurround HD - TruSurround HD™ creates an immersive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



# SOUND MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Digital Output - This is the digital COAX Audio output. Choose from the following options:

Off	To turn off Digital Output
Auto	Selects the best settings automatically
PCM	Select this option if you are connecting to a Stereo Hi-fi via coax cable (Pulse-code modulation (PCM) is a digital representation of an analogue signal)

Audio Description - This allows the user to increase and decrease the AD (Audio Description) volume level.  
(Audio Description is a service available on certain programmes. It provides a description of what is happening during the selected programme for a person who is visually impaired)

Audio Delay - Enables the user to adjust setting to sync picture and audio

# TIME MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Clock - Shows the date and time

Off Time - Allows you to set a specific time for your TV to turn off

On Time - Allows you to set a specific time for your TV to turn on, the channel it will then display, the source it will be on and also the volume. This function can then be toggled to repeat every day or a certain day (the TV must be in standby mode for this to be effective)

Time Zone - Change your current time zone

Sleep Timer - Lets you set the sleep timer so the television automatically switches off after a set amount of time. Off -> 10min -> 20min -> 30min -> 60min -> 90min -> 120min -> 180min -> 240min

Auto standby - Set Auto standby between 3 hours, 4 hours and 5 hours ( to turn off this function you must exit Home Mode in the Picture Menu)

OSD Timer - Lets you adjust the amount of time the On Screen Menu stays on the screen before disappearing

# SYSTEM/HOTEL LOCK MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

---

- System/Hotel Lock - Allows you to lock or unlock the menu. You will be asked to enter a 4 digit password. Use the ◀ button to quit the password input or use the ▶ button to clear. Default password is 0000.
- TV Button Lock - Allows you to lock the buttons on the side of the TV set
- Parental Guidance - Allows you to set the rating to block certain content based on age information
- Default Source - Allows the user to set the default source. The default source is the source the TV starts on when first switched on
- Default Channel - Allows the user to set a channel as the default channel on the Digital source. The default channel is the channel the TV starts on when first switched on
- Source Lock - Allows you to lock the source menu
- Channel Lock - Allows you to lock certain channels manually
- Max Volume - Allows you to adjust and set the maximum volume
- Change Password - Allows you to change the password

# SETUP MENU



To access this menu, press [MENU] button on the remote control and scroll right.  
To enter a menu press [OK]

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.  
To confirm any settings press [OK] button. To exit this menu at anytime, press [EXIT] button.

Language - Allows you to change the language of the menu

Audio Language - Shows the current audio language

Subtitle Language - Shows the current subtitle language

Hearing Impaired - This allows the user to turn on the Hearing Impaired function, this produces subtitles on the screen which provide a description of what is happening during the selected program.

PVR File System - Allows you to view the format and performance of a USB key

Blue Screen - Changes the background when there is no input between clear and a blue background (Only available on some sources)

First Time Installation - Allows you to access the First Time Installation menu and retune the TV set

Reset TV - This resets the menus to factory settings and clears all the TV channels from the television.

Software Update (USB) - From time to time we may release new firmware to improve the operation of the television (available to download). This menu lets you install the new software/firmware onto the television. Further details of how to do this will be issued with the firmware. Contact the helpline or refer to the 'product support' section of the website

HDMI CEC (Consumer Electronic Control) - Allows HDMI devices to control each other and allows the user to operate multiple devices with one remote control. (only available with compatible devices)

LED Status - Allows the user to switch the LED Power indicator light ON or OFF, when the TV is being operated. (When this option is set to OFF the LED Power indicator light will flash when the remote control is used)

# DVD SETUP

(Applies to models with built in DVD player)



To enter this menu please ensure the TV is in DVD source & press [DVD SETUP]

If you wish to make changes to any of the default settings, use the scroll **▲▼▶◀** buttons. To confirm any settings press [OK] button. To exit this menu at anytime, press [DVD SETUP] button.

**TV Display** - Choose from the following options

4:3 Pan scan	PS Traditional picture format, often used on old film
4:3 Letter box	LB Traditional picture which has been adapted for widescreen
Wide	16:9 Widescreen picture format

**Speaker Setup** - Choose from the following options

LT/RT	Converts from multi-channel sound to mono
Stereo	Converts from multi-channel sound to stereo

**Dual Mono** - Choose from the following options

Stereo	Outputs 2 channels of sound both left and right
Mono L	Outputs left side sound
Mono R	Outputs right side sound
Mix Mono	Outputs a single channel of sound but mix between right and left

**Dynamic Range** - This is the difference between the quietest and loudest sounds. This setting works only with DVD discs recorded in Dolby digital.

Full	Set this to listen with the range recorded on the disc
3/4	Set this to listen with a range equivalent to a normal television
1/2	Set this to listen with a smaller difference between the maximum and minimum volume
1/4	Set this to listen with a smaller difference between the maximum and minimum volume
Off	Set dynamic range to off

**TV Type** - Choose from the following options

PAL	For discs from UK/Europe, Asia, Australia etc
Multi	For both NTSC and PAL
NTSC	For discs from North America, Japan etc

**Default** - Choose from the following options

Reset	Resets all options in the 'DVD setup' menu back to the default settings
-------	---

Tip: This TV/DVD player is pre-set to play Region 2 DVDs. In the event you wish to use the TV/DVD in another country that uses different region discs, please visit [www.umc-uk.co.uk](http://www.umc-uk.co.uk). Select 'Product Support', 'Changing Region'.

# 7 DAY TV GUIDE

TV Guide is available in Freeview/Saorview TV mode. It provides information about forthcoming programmes (where supported by the Freeview/Saorview channel). You can view the start and end time of all programmes and on all channels for the next 7 days and set reminders.

1) Press [TV GUIDE]. The following 7 Day TV Guide will appear..

## 7 Day TV GUIDE

**10 Years Younger: The Challenge**  
 Season 2  
 Support worker Janice Cassidy's lifestyle of long working hours and a penchant for tanning has taken its toll, while the stress of bringing up two daughters and heavy smoking has affected interior designer Shere Morady. Surgeon Jan Stanek and the team set out to provide

04 Aug 2010 10:42

BBC1	05:00-06:00	10 Years Younger: The Challenge
BBC2	06:00-06:30	The Simpsons
ITV1	06:30-07:00	Hollyoaks
Channel 4	07:00-08:00	Channel 4 News
five	08:00-09:00	How to Look Good Naked
BBC3	09:00-10:00	Newlyweds: The One Year Itch
BBC4	10:00-11:15	Big Brother
ITV2	11:15-11:45	The Big Bang Theory

Record
Remind
Prev Day
Next Day

Move View
Display
EXIT Exit

2) Navigate through the menu using ▲▼▶◀

You can now:

Record a programme by pressing RED (USB device must be connected)

Set a reminder by pressing GREEN

View a previous day by pressing YELLOW

View the next day by pressing BLUE

3) Press [EXIT] to exit the 7 day TV Guide.

# USB RECORD - FREEVIEW/SAORVIEW MODE

## USB RECORD – FREEVIEW/SAORVIEW MODE

Built into this television is a USB record facility. This function is available in Freeview/Saorview mode when used in conjunction with a compatible USB memory stick or USB hard drive. The benefits of this are as follows:

- Pause live TV and then playback, fast forward and rewind (up to live TV)
- One button record, if you decide you want to record the current programme
- Easy programmable recording from the 7 day TV Guide
- Record TV and watch/listen back on your computer/laptop

Due to the nature of the product, it is necessary to use a high speed USB memory stick (as the TV reads from and writes to the memory stick at the same time, some memory sticks may not be suitable)

You can purchase high speed memory sticks from some computer stores, alternatively, we have a selection of tested and compatible memory sticks available to purchase directly from the helpline/web site.

### Minimum Specification - USB Memory Stick

Read Speed	20 MB/s (Mega Byte Per Second)
Write Speed	6 MB/s (Mega Byte Per Second)

**If you wish to use a USB portable hard drive larger than 32GB, please refer to the FAQ section at the rear of this user guide.**

## Pause Live TV (Time Shift)

Pausing Live TV is very simple.



- ▶| - Press the play/pause button and the television will pause and the live content will be recorded. To resume watching press play/pause again.
- ▶▶ - Press fast forward to go forward in a recording (i.e. to skip adverts)
- ◀◀ - Press fast rewind to go back in a recording (i.e. if you fast forwarded too far)

**Tip:** When you switch the TV to standby or change channel the Time Shift memory is wiped. To restart time shift you must press play/pause button.

## One Button Record

At any point in time you may decide to record the current channel that you are watching. To do this you need to press the red button highlighted below.



 
**Tip:** This television contains one TV tuner, therefore it can only record the channel you are watching or record one channel while the television is in standby mode.

**Note:** USB record function is only available in Freeview/Saorview TV mode. Due to copyright laws and illegal copying/recording it is not possible to record to/from any other input/output source.


# USB MODE/MEDIA PLAYER

USB mode offers playback of various different types of content that you have saved on your USB Memory Stick.

On switching to USB source the below menu screen will appear. The content will be divided into Photo, Music, Movie and Text based on file type.

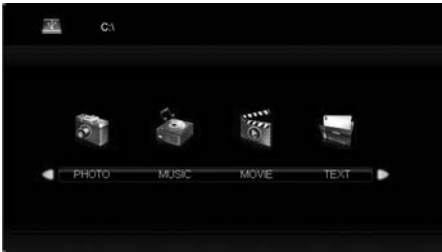

 1) You can navigate through the menus using the scroll ▲▼▶◀ buttons. To confirm the item you wish to play/view press [OK] button.

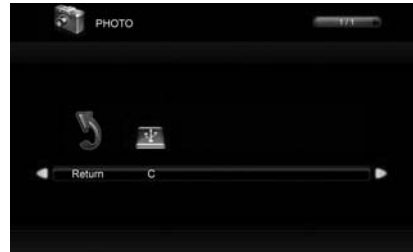

2) Select the drive you require. (If your drive only has 1 partition you will only see 1 item).



3) You can now access the item. Press OK to view.



4) While viewing you control the item using or by pressing (i) and using ▲▼▶◀ and (OK)



**Tip:** If you experience a playback issue, please ensure the files being used are the correct format (example - the picture plays but no sound) See technical specification page for compatible file types



# USING YOUR TV WITH A SKY DIGITAL SET TOP BOX

 
## Option 1) Connecting your TV to your Sky box (when both the TV and Sky Box are located in the same room)

Depending on your Sky Box & TV model, connect either by SCART or HDMI cables (available separately)

If connecting by SCART, select the 'Input source' on the TV as SCART.


If connecting by HDMI, select the 'Input source' on the TV as HDMI (if the TV has more than 1 HDMI port, ensure you select the input source to match the HDMI numbered port on the rear of the TV)

If you wish to use your Sky remote to operate the TV's functions, you will need a Sky remote control (Revision 9 or later) and you will need to programme a 4 digit code into it. See bottom of this page.

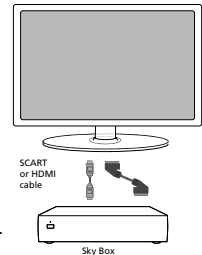

## Option 2) Connecting your TV to your Sky box (when your Sky box is located in a different room to the TV)

 Please note, if you are adding a 'Magic Eye/TV Link' to your system so that you can use your Sky remote control to change the Sky channel in the room where the 2nd TV is located, please refer to the instructions included with the TV link/magic eye in order to ensure the RF or RF2 output on your Sky box is powered on. (The red LED light on the TV link/magic eye will light up if the RF / RF2 output is correctly set up) If you do not have the instructions that came with the TV link/magic eye, instructions on how to do it can be found on our web site.

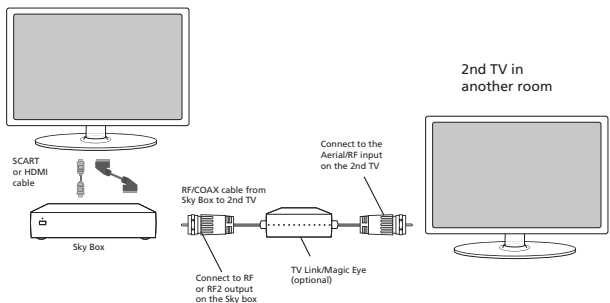

- 1) To tune the TV to the Sky box, on the 2nd TV, select the 'Analogue' input source.
- 2) Select the channel that you wish to store the Sky box/channel on. (If you do not use channels 1-5 because you no longer have analogue terrestrial channels after digital switchover, you may choose to select channel 1 to store the Sky box/channel, if you still have and use analogue channels 1-5, you may for example decide that channel 6 is the best option for you)
- 3) Press the corresponding number on the remote control to select the desired analogue channel chosen as per point 2 above.
- 4) On the TV remote control, press Menu. Now navigate through the menus to select Manual Tuning or Analogue Manual tuning (refer to the Tuning/Channel menu section of this user guide if necessary)
- 5) Manually tune in the channel (usually, the sky box is at a frequency between 800Mhz and 850Mhz) once the Sky box/channel is found, press 'OK' to store it.

If you wish to use your Sky remote to operate the TV's functions, you will need a Sky remote control (Revision 9 or later) and you will need to programme a 4 digit code into it. See below.

### Using a Sky Remote or a Universal Remote to operate your TV

**Sky Remote Control** - If you wish to use your Sky remote to operate the basic functions of your TV, you need to programme a 4 digit code into it. Please note - you will need the latest Sky Revision 9 remote control as this is the only version that includes the latest software/firmware necessary to operate this model of TV. **The code required for this television is 2134.** If you wish to upgrade/replace your existing Sky remote control to the latest version, you can do so on our web site.

**Universal Remote Control** - If you wish to use a Universal remote control to operate your TV, please refer to the website for a full list of codes. (Please note we only have codes for One for All branded remote controls, if you have an alternative brand of Universal remote, please refer to the manufacturer for the code.)

# FREQUENTLY ASKED QUESTIONS

General	I would like to have louder sound by connecting additional speakers	1) Use the 3.5mm headphone output and a 3.5mm to phono cable (available separately) to connect to an amplifier/surround sound system. Please note this will deactivate the TV's built in speakers. 2) Connect a COAX cable from the TV's COAX output to your amplifier/surround systems COAX input.
General	Why are some options in the menu unavailable and greyed out	Some options are only available in certain sources, i.e. HDMI. They are unavailable in the other sources where they have no affect.
General	Can I stop my TV automatically turning off after 4hrs?	Yes, in the time settings menu, scroll down to Auto standby and select OFF.
TV	I have tuned in Digital TV but I am not receiving any or all of the channels and/ or the channels I receive are breaking up	1) Check you are in an area that can receive Freeview/Saorview Visit <a href="http://www.freeview.co.uk">www.freeview.co.uk</a> or <a href="http://www.saorview.ie">www.saorview.ie</a> 2) Check you are using an aerial that is able to receive a good digital signal. In most cases, you will need an outdoor digital hi-gain/wideband aerial. In areas that have excellent digital coverage, you may be able to use a loft type aerial but it is highly likely that you will also need to connect a booster between the back of the TV and the TV aerial wall socket. Unfortunately, to receive a good enough digital signal, it is not possible to use a portable/indoor type aerial.
TV	I have re-tuned my television but when I switch it off it is not storing the channels	Complete a first time installation, please refer to the set-up menu section of the manual of how to do this.
VCR/DVD Recorder	I have connected the TV to my VCR or DVD Recorder via SCART but it is not recording	In addition to connecting via SCART, you should connect the aerial cable from the wall socket to your VCR/DVD Recorder and another aerial cable from the VCR/DVD Recorder to the TV.
DVD	I have inserted a disc but it is not playing	1) Ensure you have inserted the disc facing the correct way. 2) Ensure the disc is clean and is not scratched. 3) Some copied discs will not play. 4) Check the DVD is a region 2 disc – to change the region of the DVD player, refer to <a href="http://www.umc-uk.co.uk">www.umc-uk.co.uk</a> select 'product support', 'changing region'.
DVD	I have pressed the eject button but the disc is not coming out	To eject the disc hold the stop/eject button for 4 seconds.
Game Consoles	I have connected my PS3 to the TV via HDMI, but I am not receiving any pictures or sound on my Television	1) Ensure the TV's source is on HDMI. 2) Check your settings on your PS3 are as per the PS3 instruction manual.
Game Consoles	I have connected my Xbox 360 to the TV via Component Cables (Red, Green & Blue) but I am not receiving any sound	Component cables only provide HD Pictures. For the sound you will need to connect the Red & White audio cables on the Xbox to the Red & White phono inputs on the rear of the TV. Please refer to the 'Connections' pages.
USB Mode	I have inserted a USB Memory Key, but the TV does not recognise it	Ensure the USB Memory Key is formatted to type FAT32.
USB Mode	Using a USB portable hard drive / larger than 32GB	If you wish to use a portable hard drive larger than 32GB, please note that it must be formatted to the FAT32 file system in order to operate on this TV. Windows XP/Vista computers are only capable of formatting up to 32GB, therefore, you will need a software programme/utility to format larger hard drives. Please refer to the web site for more information.
System Lock	I have changed the password on the television and now forgotten it	There is a master password of 4711, to gain access to the TV menu and reset the normal password.
USB Record / TV models only	I cannot change the channel, access the menu or use the red button	During Time Shift you cannot change the channel, access the menu or use the red button
USB Record / TV models only	When using the USB to record the picture 'breaks up' or experience loss of sound.	Check the USB Memory Stick meet the minimum requirements of Read Speed - 20 MB/s (Mega Byte Per Second), Write Speed - 6 MB/s (Mega Byte Per Second)

# TECHNICAL SPECIFICATION

## Product fiche (22" Full HD Models)

Supplier	Technika	
Model ID	22E21B-FHD	22E21B-FHD/DVD 22E21W-FHD/DVD 22E21P-FHD/DVD 22E21S-FHD/DVD (Models with inbuilt DVD player)
Energy efficiency class	A	
Visible screen size (diagonal)	55 cm / 21.5 inches	
On mode model average power consumption	20 W	
Annual energy consumption *1	30 kWh	
Standby power consumption *2	<0.5 W	
Off mode power consumption	0 W	
Screen resolution	1920 (H) x 1080 (V)	
<p>*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.</p> <p>*2: When the TV is turned off with the remote control/standby button and no function is active.</p>		

## Additional Technical Information

RF	75 ohm Antenna / Analog / DVB	
Inputs	2 x HDMI, 1 x USB, 1 x mini A/V - Composite/Video & 1 x shared audio for Composite/Video & Component/YPbPr, 1 x Mini Component/YPbPr, 1 x VGA/PC, 1 x 3.5mm jack for PC audio input	
Sound Outputs	1 x Coax Audio output, 1 x 3.5mm Headphone	
Speaker / Sound Watts (RMS)	2 x 3	
Voltage and power consumption	110-240V 50 / 60Hz 20/40W (ecomode/max)	110-240V 50 / 60Hz 20/50W (ecomode/max)
Dimensions including stand (mm)	510W x 355H x 140D	
Net weight (Kgs)	4.1	4.4
Wall Mounting	VESA 100 x 100 (mm)	

# TECHNICAL SPECIFICATION

## Product fiche (24" Full HD Models)

Supplier	Technika	
Model ID	24E21B-FHD	24E21B-FHD/DVD 24E21W-FHD/DVD (Models with inbuilt DVD player)
Energy efficiency class	A	
Visible screen size (diagonal)	60 cm / 23.6 inches	
On mode model average power consumption	25 W	
Annual energy consumption *1	37 kWh	
Standby power consumption *2	<0.5 W	
Off mode power consumption	0 W	
Screen resolution	1920 (H) x 1080 (V)	
*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.		
*2: When the TV is turned off with the remote control/standby button and no function is active.		

## Additional Technical Information

RF	75 ohm Antenna / Analog / DVB	
Inputs	2 x HDMI, 1 x USB, 1 x mini A/V - Composite/Video & 1 x shared audio for Composite/Video & Component/YpBPr, 1 x Mini Component/YpBPr, 1 x VGA/PC, 1 x 3.5mm jack for PC audio input	
Sound Outputs	1 x Coax Audio output, 1 x 3.5mm Headphone	
Speaker / Sound Watts (RMS)	2 x 3	
Voltage and power consumption	110-240V 50 / 60Hz 25/40W (ecomode/max)	110-240V 50 / 60Hz 25/50W (ecomode/max)
Dimensions including stand (mm)	560W x 386H x 140D	
Net weight (Kgs)	4.5	4.9
Wall Mounting	VESA 100 x 100 (mm)	

# TECHNICAL SPECIFICATION

## Product fiche (24" HD Ready Models)

Supplier	Technika	
Model ID	24E21B-HDR	24E21B-HDR/DVD 24E21W-HDR/DVD (Models with inbuilt DVD player)
Energy efficiency class	A	
Visible screen size (diagonal)	60 cm / 23.6 inches	
On mode model average power consumption	25 W	
Annual energy consumption *1	37 kWh	
Standby power consumption *2	<0.5 W	
Off mode power consumption	0 W	
Screen resolution	1366 (H) x 768 (V)	
<p>*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.</p> <p>*2: When the TV is turned off with the remote control/standby button and no function is active.</p>		

## Additional Technical Information

RF	75 ohm Antenna / Analog / DVB	
Inputs	2 x HDMI, 1 x USB, 1 x mini A/V - Composite/Video & 1 x shared audio for Composite/Video & Component/YPbPr, 1 x Mini Component/YPbPr, 1 x VGA/PC, 1 x 3.5mm jack for PC audio input	
Sound Outputs	1 x Coax Audio output, 1 x 3.5mm Headphone	
Speaker / Sound Watts (RMS)	2 x 3	
Voltage and power consumption	110-240V 50 / 60Hz 25/40W (ecomode/max)	110-240V 50 / 60Hz 25/50W (ecomode/max)
Dimensions including stand (mm)	560W x 386H x 140D	
Net weight (Kgs)	4.5	4.9
Wall Mounting	VESA 100 x 100 (mm)	

# TECHNICAL SPECIFICATION

## Compatible files in USB Mode

Media	File Ext.	Codec		Remark
		Video	Audio	
Movie	.mpg	MPEG-1, MPEG-2	MP3, WMA, AAC	Max Resolution: 1920x1080 Max Data rate: 40 Mbps
	.avi	Xvid, MJPEG, MPEG-4 SP/ASP, H.264		Max Resolution: 1920x1080 Max Data rate: 20 Mbps
	.ts	MPEG-2, H.264		
	.mov/ .mkv	MPEG-4 SP/ASP, H.264		Max Resolution: 720x576 Max Data rate: 40 Mbps
	.dat	MPEG-1		
	.mp4	MPEG-4 SP/ASP, H.264		
		MPEG-1, MPEG-2		
.vob	MPEG-2			
Music	.mp3	-	MP3	Sample Rate 8K-48KHz Bit rate: 32K - 320Kbps Channel: Mono/Stereo
	.wma	-	WMA	
	.m4a/ .aac	-	AAC	Sample Rate 16K-48KHz Bit rate: 32K ~ 442Kbps Channel: Mono/Stereo
Photo	.jpg/ .jpeg	Progressive JPEG		Max Resolution: 1024x768
		Baseline JPEG		Max Resolution: 8192x8192
	.bmp	BMP		Max Resolution: 6500x6500 Pixel Depth 1/4/8/16/24/32 bpp
	.png	Non-Interlaced		Max Resolution: 3000x3000
		Interlaced		Max Resolution: 1500x1500



TEC/MAN/0080